

ADVANCEDFRAME® ULTRALITE INFLATABLE KAYAK

OWNER'S MANUAL MODEL AE3022

PATENTED



1 PERSON KAYAK

IMPORTANT!

PLEASE READ THIS MANUAL CAREFULLY BEFORE PROCEEDING. AFTER READING THIS MANUAL, SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.



INTRODUCTION

Designed in California, our goal at Advanced Elements is to develop new and unique paddlesports products that enhance our customers' outdoor experience. Our focus is on designing and manufacturing "Inflatable kayaks with cutting edge technology" and providing excellent customer service. We are deep rooted in product development with patented technology, striving to develop inflatable kayaks, iSUPs, and paddlesports accessories that excel in performance, quality, and portability. All of our products have been designed to give paddlers the tools they need at the value that they deserve.

We feel that it is extremely important to make sure that our customers are having the best experience possible. One of the ways we do this is by a passionate focus on customer support. It is the feedback from our customers that has allowed us to excel and continue to grow over the years.

Our offices, near San Francisco California, are not only where we conceive of and design our innovative products, but also where you will find our excellent Customer Service team that is ready to answer any questions you might have about our products and offer premier product support.

We hope to see you someday soon, on the water!

Sincerely, The Advanced Elements Team



TABLE OF CONTENTS

| 1. | Caution/Safety | | | |
|-----|--|------------------------------------|----|--|
| | 1.1 | Boating Safety | 5 | |
| 2. | Specif | fication | 6 | |
| | 2.1 | Capacity | 6 | |
| | 2.2 | Features | 6 | |
| 3. | Assembly/Inflating/Deflation Instruction | | | |
| | 3.1 | Assembly | 7 | |
| | 3.2 | Understanding Your Valves | 8 | |
| | 3.3 | Inflating | 10 | |
| | 3.4 | Over Inflation | 10 | |
| | 3.5 | Deflation | 10 | |
| | 3.6 | Folding | 12 | |
| 4. | Guide | elines for Usage | 12 | |
| 5. | Proper Care and Storage | | | |
| 6. | Repai | rs | 13 | |
| | 6.1 | Repairing Small Punctures and Cuts | 13 | |
| | 6.2 | Repairing Pinholes | 13 | |
| 7. | Troul | oleshooting | 14 | |
| 8. | State | ment of Origin | 17 | |
| 9. | Decla | ration of Conformity | 18 | |
| 10. | Warra | anty and Registration | 19 | |



1. CAUTION - SAFETY WARNING

Users of this product agree by their use to accept the inherent risks involved in this paddlesports activity and agree to follow all instructions, cautions, and warnings carefully before using this Kayak.

(PLEASE READ CAUTION STATEMENT CAREFULLY)

A CAUTION

SAFETY WARNING

PADDLESPORTS CAN BE VERY DANGEROUS AND PHYSICALLY DEMANDING. THE USER OF THIS PRODUCT SHOULD UNDERSTAND THAT PARTICIPATION IN PADDLESPORTS MAY INVOLVE SERIOUS INJURY OR DEATH. OBSERVE THE FOLLOWING SAFETY STANDARDS WHENEVER USING THIS PRODUCT.

- \cdot GET PADDLESPORTS INSTRUCTIONS SPECIFIC TO THIS TYPE OF CRAFT.
- · OBTAIN CERTIFIED FIRST AID TRAINING AND CARRY FIRST AID AND RESCUE/SAFETY EQUIPMENT.
- \cdot ALWAYS WEAR A NATIONALLY APPROVED PERSONAL FLOTATION DEVICE.
- · ALWAYS WEAR A HELMET WHERE APPROPRIATE.
- DRESS APPROPRIATELY FOR WEATHER CONDITIONS; COLD WATER AND/OR COLD WEATHER CAN RESULT IN HYPOTHERMIA. CHECK YOUR EQUIPMENT PRIOR TO EACH USE FOR SIGNS OF WEAR OR FAILURE.
- \cdot NEVER PADDLE ALONE.
- · DO NOT PADDLE IN FLOOD CONDITIONS.
- · BE AWARE OF APPROPRIATE RIVER WATER LEVELS, TIDAL CHANGES, DANGEROUS CURRENTS, WEATHER CHANGES, AND STRONG OFF SHORE WINDS.
- · SCOUT UNFAMILIAR WATER; PORTAGE WHERE APPROPRIATE.
- · DO NOT EXCEED YOUR PADDLING ABILITY; BE HONEST WITH YOURSELF.
- · CONSULT YOUR PHYSICIAN PRIOR TO BEGINNING YOUR PADDLESPORTS TRAINING.
- \cdot YOU MUST NOT USE ALCOHOL OR MIND ALTERING DRUGS PRIOR TO USING THIS PRODUCT.
- \cdot FOLLOW THE MANUFACTURER'S RECOMMENDATIONS FOR THE USE OF THIS PRODUCT.
- · IF ADDITIONAL OUTFITTING IS REQUIRED, USE MANUFACTURER'S APPROVED
- MATERIALS ONLY; DO NOT IMPAIR ENTRY OR EXIT ACCESS.
- \cdot READ OWNER'S INFORMATION PACKET PRIOR TO USING THIS PRODUCT.

THE USER OF THIS PRODUCT ACKNOWLEDGES BOTH AN UNDERSTANDING AND AN ASSUMPTION OF THE RISK INVOLVED IN PADDLESPORTS.

ADVANCED ELEMENTS, INC. TOLL FREE 866-262-9076

Please read this entire manual for additional safety information. Please pay close attention to items marked DANGER, WARNING, CAUTION, IMPORTANT, NOTICE, NEVER, and ALWAYS.

1.1 Boating Safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

| ▲ DANGER ▲ | Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury or substantial property damage. |
|--------------------------|---|
| A WARNING | Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury or property damage. |
| A CAUTION | Indicates a potentially hazardous situation which, if not avoided, may result in property damage. |
| CAUTION | Used without the safety alert symbol indicates a potentially hazardous situation, which, if not avoided, may result in property damage. |
| NOTICE | Indicates installation, operation or maintenance information which is important but not hazard-related. |

The precautions listed in this manual and on the craft are not all-inclusive. If a procedure, method, tool or part is not specifically recommended, you must satisfy yourself that it is safe for you and others, and that the craft will not be damaged or made unsafe as a result of your decision. REMEMBER - always use common sense when paddling YOUR KAYAK!



2. SPECIFICATION

Dimensions:

Length: 10′5″ Width: 32″

Weight: 17.5 lbs (7.9 kg)
Max. Person Capacity: 225 lbs (102 kg)
Max. Persons & Gear Capacity: 225 lbs (102 kg)

Recommended Pressure:

Main chambers: 2.0 psi (0.14 bar)



2.1 Capacity

The person/load capacity is determined by the availability of proper seating on the kayak. Acceptable seating determines the number of passengers, not the overall load capacity.



AdvancedFrame® Ultralite Kayak Capacity Label

A WARNING: Do not exceed the certified maximum capacities under any circumstances. Overloading will reduce freeboard and increase the likelihood of swamping, especially in heavy seas. Overloading causes handling to become sluggish, making it difficult to react quickly.

2.2 Features

Hull Design: Built-in Aluminum ribs define the bow and stern and improve tracking.

Durable: Multiple layers of material for extreme puncture resistance.

Easy to Set Up: Pre-assembled at the factory. Simple and quick to set up.

Comfortable: High support, adjustable padded seat provides comfort for hours of paddling.

Style: Looks and paddles similar to a rigid hard-shell kayak with the portability of an inflatable.




3. ASSEMBLY/INFLATING/DEFLATION INSTRUCTION

The AdvancedFrame® Ultralite Kayak has a rigid frame in the bow and stern that enhances its performance.

3.1 Assembly

The illustration below shows the general assembly of the kayak. Your kayak comes from the factory pre-assembled.

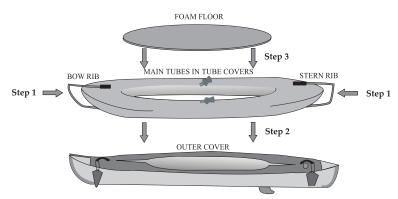

- Your kayak comes from the factory pre-assembled. However, should you take it apart, you
 will need to insert the sluminum Bow and Stern Ribs into the webbing slots at the end of the
 grey fabric tube covers (while deflated).
- 2. Then place the tube covers (with the ribs installed) into the outer skin of the kayak. Then, make sure that the ribs are placed all the way into each end of the kayak.




3.2 Understanding Your Valves

The AdvancedFrame® Ultralite kayak uses our proprietary Spring Valve. The Advanced Elements Spring Valve has the function and durability of other military type valves and is compatible with most standard pumps. The locking nut around the valve holds the valve in place with the tube cover for easy inflation. The following figures and information detail how to operate the valves.

To Inflate: The valve's plunger stem should be in the up/outward position flush with the valve threading.

To Deflate: The valve's plunger stem should be set in the down/inward position recessed in the valve threading.

In order to switch the valve from inflate to deflate or vice-versa, simply use your finger to press the valve stem down/inward and rotate it a 1/4 turn to either lock it down for deflate, or unlock it (stem will spring up) for inflate.

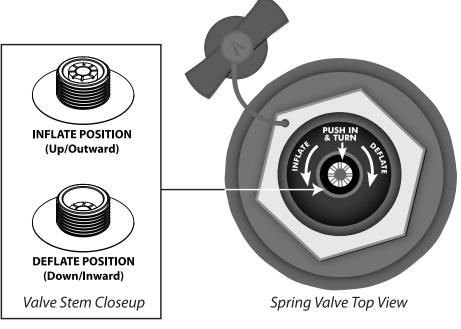

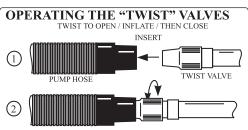


Figure 1. Inflate/Deflate operation of the Spring Valve and Twistlok Valve

How the Spring Valve Works:

When the valve is in the inflate (up/outward) position, the air being pumped in pushes the spring-loaded plunger open, allowing air to enter the air chamber, but not letting it escape. When the valve is in the deflate (down/inward) position, the spring loaded plunger is wide open allowing the air to come rushing out of the air chamber. If the valve is in the inflate position, the valve's plunger stem will be flush with the rim of the valve. If the valve is in the deflate position, the valve's plunger stem will be inside, or lower than, the rim of the valve. To change the valve from the inflate position to the deflate position, simply use your finger to press the valve plunger stem down/inward, and give it a 1/4 turn. This will lock the plunger open and allow the air to rush out. Use the same procedure in reverse to unlock the valve plunger, allowing it to spring up into the inflate position.

Special Note: If you are using a 12v inflator, like those that come with most inflatable mattresses or those that plug into car cigarette lighters, you may need to have the valve in the deflate (down/inward) position because these types of pumps typically do not provide enough air pressure to press the plunger open to allow air into the air chamber. Additionally, 12v inflators do not provide enough pressure to fully inflate the kayak, so you will need a secondary pump to finish the job.

Using the "Screw-on" Spring Valve Adaptor:

The screw-on Spring Valve Adaptor was designed to enable the pump hose to securely connect to the Advanced Elements Spring Valve without falling off during inflation, making inflation easier. The valve adaptor also has a semi-circle protrusion that depresses the valve stem, opening the valve slightly to allow pumps with pressure gauges to take a constant reading. When inflating the kayak using the Spring Valve Adaptor, the valve should be in the inflate position.

Special Note: The Spring Valve Adaptor comes with all current Advanced Elements pumps, with the exception of the 12v inflator, and will attach to any Advanced Elements pump that does not have the adaptor already included, with the exception of the 12v inflator. The Spring Valve Adaptor will also attach to some other manufacturer's pumps, but you must check the attachment style at the end of the pump hose to be sure it will fit.



3.3 Setup & Inflation

IMPORTANT: Before inflating, check to be sure that the kayak is completely assembled. Inflate your kayak in the following order. **Failure to follow these instructions may cause damage to your kayak**. **Do not over inflate**.

To begin inflating your kayak, you will need a **Bellows Foot Pump** or a **Double Action Hand Pump**. **Never use compressors, CO2 or compressed air as they may damage your kayak.**

- Unflold the kayak and install the foam floor inside of the kayak. Make sure that it is tucked under the grey Main Chambers and that the narrower end of the floor is facing towards the front of the kayak.
- **2.** Move to the 2 Main Chambers and check to be sure the Spring Valves are in the inflate position. *See Figure 1 on previous page.*
- 3. Partially inflate each of the side Main Chambers until they begin to fill out and take shape.
- 4. Install aluminum deck pole into the sleeve located on the underside of the kayak deck. (See Figure 2.)
- 5. Locate the small black pockets on the tube sleeves of the Main Chambers and install the Aluminum Deck Riser into the pockets. Orient it so that the notch aligns with the deck pole. (See Figure 2.)
- **6.** Inflate the small wedge-shaped inflatable foot brace and place it inside of the kayak, at the front, to provide your desired foot bracing. (*See Figure 1 on previous page.*)
- 7. Now, inflate the 2 Main Chambers until firm and cover openings with valve caps. (2.0 psi MAX).
- 8. Place seat in kayak and attach the seat buckles to the buckles on the grey tube covers in the kayak.
- 9. Finally, insert Plastic Bow and Stern forms into pockets at bow and stern. See Figure 3.

3.4 Over Inflation

A CAUTION: Water temperature and weather will affect the air pressure of the kayak. In cold weather and water your kayak will lose some pressure. If this occurs, you may want to add a bit more air to the kayak to improve performance. In hot weather or prolonged sunlight, the air inside the kayak will expand. You must let some air out of the appropriate chambers to prevent the kayak from failing due to overpressure. You should avoid exposing your kayak to extreme temperatures (hot or cold).

INFLATION TIPS

Use either a bellows style foot pump or two-way hand pump to inflate your kayak. Be sure that the fitting on the pump hose fits snug in the valve on the kayak. **NEVER** USE COMPRESSORS, CO2, OR COMPRESSED AIR AS THEY MAY DAMAGE YOUR KAYAK. The main chambers use high-end military style, plunger valves (Push in and twist to activate the spring-loaded check valve for inflating, or push-in and twist to lock open for deflating).

3.5 Deflation

- **1.** Remove the caps from both main chambers.
- **2.** Using the tip of your finger, push the valve stems inward on each valve and rotate to the Deflate Position. (*See Figure 1*).
- 3. Detatch kayak seat from kayak and remove.
- 4. Remove the inflatable footbrace and twist open the inflation valve to deflate.
- 5. Remove aluminum deck pole from the sleeve located on the underside of the kayak deck.
- 6. Remove the Aluminum Deck Riser.
- 7. Remove the Plastic Bow and Stern forms from their pockets at the bow and stern.

 Note: Depending on the model of your pump, you may be able to reverse the air flow and vacuum out the air from the Main Chambers for a more compact folding.

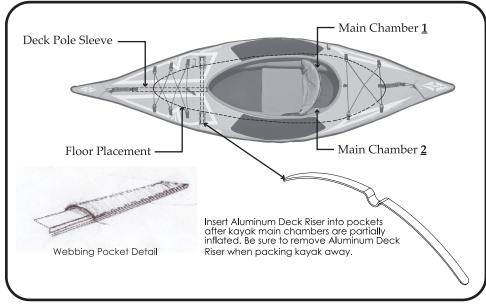


Figure 2. Inflation Chambers, Floor & Aluminum Deck Lift Installation

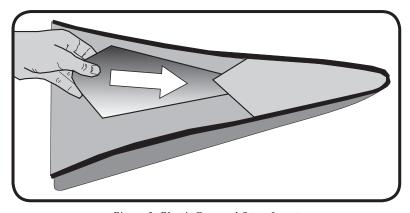



Figure 3. Plastic Bow and Stern Insert



3.6 Folding

NOTICE: Reverse your pump to completely deflate all chambers.

- Completely deflate all air chambers, thoroughly dry the kayak, and remove the seat.
 Reversing your pump to pump out all the remaining air will make folding easier.
- Remove the plastic bow and stern forms, deck pole and riser, foot brace, and floor then lay kayak out flat.
- Fold in half, down the center (right to left)(A).
- 4. Fold into 4 equal sections.
- 5. Place into duffel bag.

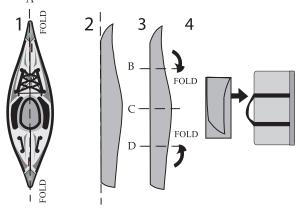

4. GUIDELINES FOR USAGE

Paddlesports can be very dangerous and physically demanding. The user of this product should understand that participation in paddlesports may involve serious injury or death. Observe the following safety standards whenever using this product. The user of this product acknowledges both an understanding and an assumption of the risk involved in paddlesports.

After you have inflated your kayak and before you put it in the water, inspect your equipment for obvious signs of wear or failure. Review local rules and regulations and read again the "CAUTION" statement.

Most areas have local laws and regulations about the use and equipment of small boats. Usually a phone call to the local authorities will provide you with the needed information. Some areas may require that you register and display a registration number on the front of your kayak. Once you have been issued a number, it is best to affix it to the kayak by printing it on the material with a permanent ink marker. If you are required to display a sticker or vinyl letters, an inflatable boat ID kit can be purchased at most marine stores.

Your kayak is designed to be paddled with a double bladed kayak paddle. Paddle with short and even strokes. Keep the blade close to the kayak and the paddle almost vertical. Pull with your lower hand and push with your upper hand. To reduce the amount of swaying at the front of the kayak, ease off on the force of your stroke. Paddling with a backward stroke can sometimes offer quick maneuverability.

ALWAYS practice safety and take the time to learn about the area where you are paddling. Get official information about the local tides and currents before paddling there. Be careful that you do not over estimate your strength, your endurance or your skill. Be careful never to under estimate weather conditions. Be aware of the dangers before you begin. Be aware of your skill level. Be sure you understand and accept the risk of these dangers. There are many paddling clubs all over the world. These can be a great source of information on places to paddle, people to paddle with and most importantly, continued safety practices.

5. PROPER CARE AND STORAGE

Your inflatable kayak is made of very durable materials. However, like anything else, proper use and care will increase the life of your kayak. Before storing your kayak, make sure it is both CLEAN and DRY. You may clean your kayak with a mild soap and water. **NEVER** use strong solvents to clean your kayak as they will destroy the material.

Do not store your kayak for an extended period of time while wet.

Follow these steps for removing excess water.

- Remove the grey fabric tube cover, along with the foam floor, separating it from the outer cover.
- 2. Use a sponge or towel and wipe up any excess water in the outer cover.
- 3. Wipe off the floor (top and bottom)
- If there is sand or gravel in the kayak, you can hose out the cover, and then wipe it down with a towel.
- 5. Most of the time you can just pull out the foam floor and wipe out the inside of the kayak, absorbing most of the water, then you can pack it up.

6. REPAIRS

All kayaks come with a repair kit that includes glue and several patches. This should remain with the kayak in the event that you may need it. If service is required for your kayak, please call **866-262-9076** for assistance.

6.1 Repairing Small Punctures and Cuts

- 1. Cut a rounded patch at least ¼" or ½" larger than the hole or cut.
- 2. Clean the area where the patch will be placed with water and/or mild soap.
- 3. Make sure all surfaces are dry.
- 4. In a well ventilated area, spread a thin layer of glue on both the patch and on the damaged area. Let it sit for three to five minutes or until tacky.

6.2 Repairing Pinholes

- 1. Inflate the PVC tube. Locate the pinhole by sponging soapy water over the tube until you see air bubbles. Mark the location of the pinhole.
- 2. Deflate the tube and dry the affected area. Apply a drop of glue to the pinhole
- 3. Allow glue to dry completely.
- 4. Do not inflate the kayak for at least twelve hours.



7. TROUBLESHOOTING

PROBLEM

SOLUTION

Does not hold air while inflating.

The spring valve uses a plunger system. The only time the plunger should be in the open position is when you are deflating. Make sure that the plunger is closed to inflate. Push the plunger in and rotate counter-clockwise.

The kayak is sagging or under inflated.

Be sure that the right pump is being used. You need a bellows foot pump or a double action hand pump. A 12-V electric does not supply enough pressure to fully inflate the kayak. The 12-V can be used to partially inflate the kayak but one of the other pumps is needed to top it off.

The kayak will not hold full pressure for more than a couple of hours. Make sure that the plunger is in the closed position. It should only be open when deflating. If it is open, the only seal is the black rubber gasket inside the cap. Even then, a little air may still leak out.

Kayak still loses air.

If you have checked all the previous possible reasons for the kayak losing air, then there may be a pinhole or a puncture somewhere on the tube. Pull tube from outer covers. Inflate. If you cannot see or hear where a leak may be, take a clean rag with soapy water and begin rubbing the tube. If a hole is present, bubbles will continually form. Repair using repair kit. If it is a very small pinhole, a dab of the glue may be sufficient.

Tube is kinked or bent in.

The tube just needs to be adjusted. When kayak is fully deflated try adjusting the position of the tube inside of the outer shell. Then reinflate.

The fin is bent.

After inflating the kayak, turn upside down and leave out in sun for approximately ten minutes. Fin will conform to its original shape. Even if it is slightly bent, it will not affect the kayaks performance.

Water in the kayak.

There will almost always be a little water in the kayak. One reason is the water drips off of the paddle and into the kayak. Make sure that the deck lifts are fully inflated to prevent puddling of water on the deck of the kayak.

The kayak drifts to one side.

A kayak will always head in the direction of your last stroke. The longer the kayak the less this is usually noticed. If it is drifting in the opposite direction, the floor may not be aligned. Make sure that the floor is properly centered inside the kayak cover. If the floor is off-center it will cause uneveness in the kayak.

PADDLING NOTES:

It is alway a good idea to keep nots of your paddling experiences. Your notes can serve as a reminder of what to look out for, as well as what gear to bring along, and what conditions are like.

| DATE | TIME | LOCATION | NOTES |
|------|------|----------|-------|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

NOTES:

Note: If your state requires the licensing of this boat, please use the form below. If you need any assistance filling out this form, please contact Advanced Elements Customer Service Department.

MANUFACTURER'S STATEMENT OF ORIGIN FOR A VESSEL SOLD IN THE STATE OF_____

| The undersigned manufacturer hereby certified | | |
|---|----------------------------------|--------------------------------------|
| said manufacturer, has been transferred this _ | day of | f, 20on |
| Invoice#to: | | |
| Owner's/Dealer's Name | | |
| Address | | |
| City, State, Zip | | |
| Model Name | Model Year | Manufacturer's Hull Identification# |
| O AdvancedFrame® Ultralite Kayak (AE3022) | | HIN# |
| Type: Kayak Hull Mate | erial: TPU/Poly | rester |
| Length Overall: 10'5" Beam: 32 | " | |
| U. S. Coast Guard Capacity Plate Information | (where applica | ble): |
| Maximum persons capacity in whole | persons: 225 lb | s (102 kg) |
| Maximum weight capacity (persons & | gear): 225 lbs | (102 kg) |
| The manufacturer further certifies that this wa | as the first trans | fer of such new boat and that all |
| information given herein is true and accurate | to the best of th | eir knowledge |
| - | | _ |
| | ANCED MENTS 28 Concord, CA | A 94524 |
| 9 | ASSIGNME | NT |
| FOR VALUE RECEIVED, in the amount of \$_ | | |
| the undersigned hereby transfers the Certifica | | |
| to | _ | |
| Address | | |
| and certifies that the boat is new and has not l | neen registered | in this or any other state: Advanced |
| Elements, Inc. also warrants the title of said be | | |
| encumbrances as set out below: | | |
| | om Due | Address |
| | | - Tradicos |
| Dates20 | | |
| | | |
| Transferrer (Firm name) Sign Here | | |
| | | who by me being duty sworn under |
| oath says the statements set forth above are tr | | |
| this day of | | |
| | | ate commission expires |

(SEAL)

Declaration of Conformity

(according to ISO/IEC Guide 22 and EN 45014)

Manufacturer's Name: Advanced Elements, Inc.

Manufacturer's Address: P.O. Box 5128

Concord, CA 94524

declares, that the product:

Product Name: AdvancedFrame® Ultralite Kayak

Model Number (s): AE3022

to which this declaration relates, meets the essential health and safety
requirements and is in conformity with the relevant EU Directives listed below:

General Product Safety Directive

using the relevant section of the following EU standards and other normative documents:

EN ISO 6185-1 : 2001 ABYC H-29: 2012

Date: January 1, 2018

Clay Haller, President

This product complies with European directives for recreational vessels as published by the International Organization for Standardization (ISO).

LIMITED WARRANTY

Advanced Elements, Inc. warrants this product to be free from defects in material or workmanship for a period of one year from the date of purchase. Products that prove to be defective under conditions of normal and proper use during the warranty period because of defective workmanship or faulty material will be replaced or repaired without charge. For warranty service, contact Advanced Elements, Inc.

Advanced Elements, Inc shall inspect all warranty claims and in the event of a defect, repair or replace the defective part or entire item, at its option. The purchaser must, before return of a defective product, obtain from Advanced Elements, Inc, a return authorization number and return center address. Please write or call as listed below. Once an authorization number is obtained, the purchaser must ship the product, POSTAGE PREPAID, to Advanced Elements, Inc for repair. Do not ship to P.O. Box address as it may be sent back.

This warranty does NOT cover:

Products used for rental, for hire or in professionally guided tours and other uses not considered normal recreational purposes; and punctures, cuts and abrasions sustained in normal use; and items involved in accidents; and items damaged in white water mishaps, and other unreasonable uses or improper storage.

Advanced Elements, Inc shall within (30) days from receipt of an authorized return from purchaser, perform its responsibilities in conformance with this warranty.

THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION OF THE FACE HEREOF. ADVANCED ELEMENTS SHALL NOT BE HELD LIABLE FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES.

THIS WARRANTY IS INCLUSIVE IN LIEU OF ALL OTHER WARRANTIES.

 $This \ warranty \ gives \ you \ specific \ legal \ rights, \ and \ you \ may \ also \ have \ other \ rights \ that \ vary \ from \ state \ to \ state.$

Advanced Elements, Inc.

P.O. Box 5128, Concord, CA 94524

Toll Free - 866-262-9076 - email info@advancedelements.com - www.advancedelements.com

| ADV. | ANCED E | LEMENTS (PLEASE TYPE | | | EGISTRAI | ION |
|----------------|---------------------|-------------------------|------------------|-------------|-------------------|--------------|
| Please com | plete and mail ca | ard to Advanced E | lements within | 10 days. It | will register you | ır product. |
| | N | Mail to: Adva | nced Eleme | ents, Inc | • | |
| | P | O. Box 5128, | Concord, C | CA 94524 | 1 | |
| | | Attn: Warr | anty Depar | tment | | |
| Owner's Nai | me | | | | | |
| Address | | | | | | |
| City | | | St | ate | Zip | |
| | | Seria | | | | |
| Purchase Da | te | | | | (located at re | ear of boat) |
| Store Name | | | | | | |
| | | | | | | |
| City | | | State | | Zip | |
| Email | | | | | | |
| Thank you for | responding to the | e following | | | | |
| 1. How did yo | u first learn of th | is product? | | | | |
| O Dealer | O Friend | O Magazine | O Radio | O TV | O Catalog | O Other |
| 2. What most i | nfluenced your c | lecision to purcha | se this product? | | | |
| O Price | O Features | O Style | O Ouality | O Otl | 2011 | |

IMPORTANT!

PLEASE READ THIS MANUAL CAREFULLY BEFORE PROCEEDING.
AFTER READING THIS MANUAL, SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE.

If you would like a catalog of our latest products please visit our website at www.advancedelements.com or call Toll Free 866-262-9076

PLEASE COMPLETE THE OTHER SIDE OF THIS
WARRANTY REGISTRATION CARD AND RETURN TO ADVANCED ELEMENTS, INC.

PLACE STAMP HERE



P.O. Box 5128 Concord, CA 94524 1-866-262-9076 www.advancedelements.com

Email: info@advancedelements.com